

CLEANING & MAINTENANCE

- The H2O e3 Fruit & Veggie eSprayer Bottle can be cleaned with a damp cloth.
- The inside of the H2O e3 eActivator can be cleaned thoroughly with vinegar. Place approximately 50ml of vinegar and 200ml of water into the eActivator, close the eActivator cap and shake the contents. Let the water/vinegar solution sit inside the eActivator for 20-30 minutes. Empty the eActivator, rinse thoroughly with regular tap water and use new water to make the next batch of S-Water™.
If necessary repeat the cleaning process or let the water/vinegar solution sit longer inside the eActivator until limescale is completely removed from the metal mesh. In areas with hard water limescale removal should be done more frequently.
- It is recommended to clean the inside of the eActivator if it is used for electrolysis more than once. For example, if you are making multiple batches back to back and having the electrolysis process run for more than 15-20 minutes, add vinegar to the water tank after use and shake it and soak the metal electrolysis net for about 3 minutes. After cleaning with vinegar, rinse it thoroughly with regular tap water again.

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Adapter Input: 100-240V~ 50/60Hz Output: 5V/1A



Distributed by:

Thane Canada Inc.
Mississauga ON L4W 5M6, Canada
www.thane.ca

Thane USA, Inc.
Canton OH 44718, U.S.A.
www.thane.com

Thane Direct UK Limited
+44 (0)20 3455 8520
www.thane.tv

Danoz Direct Pty Ltd.
Bondi Junction, NSW, 2022, Australia
www.danoz.com.au

OPERADORA AINO A SAPI DE CV
Av. Magnocentro No. 5 Piso 1 Col. Centro Urbano
Interlomas Municipio Huixquilucan de Degollado,
Huixquilucan, Estado de México. C.P: 52760
www.mejorcomprativ.com

TVNS Scandinavia AB
SE-211 74 Malmö, Sweden
www.tvins.com

© 2019 Thane IP Limited.

"Thane", "H2O e3" and related logos and variations are trademarks or registered trademarks, in Canada and/or other countries, of Thane IP Limited and/or its affiliated companies.

MADE IN CHINA



Safety & Instruction Manual

WARNINGS AND CAUTIONS

PLEASE READ ALL PRODUCT INSTRUCTIONS CAREFULLY. FAILURE TO FOLLOW THE PRODUCT INSTRUCTIONS WILL VOID YOUR WARRANTY.
USE YOUR H2O e3™ FRUIT & VEGGIE eSPRAYER ONLY AS DIRECTED IN THIS MANUAL AND ONLY WITH THE MANUFACTURER'S RECOMMENDED ACCESSORIES.
AS WITH ANY ELECTRICAL APPLIANCE, BASIC PRECAUTIONS SHOULD ALWAYS BE OBSERVED WHEN USING THIS PRODUCT, INCLUDING THE FOLLOWING:

When using the H2O e3™ Fruit & Veggie eSprayer basic safety precautions must always be followed:

1. Read all instructions before operation
2. Always follow ALL safety precautions and Instruction Manual directions when working with H2O e3™ Natural Cleaning System and S-Water™.
3. Verify that the voltage indicated on the adapter rating label corresponds with the voltage of your electrical outlet.
4. This appliance is designed for household use only. Commercial use of the H2O e3™ Natural Cleaning System voids the manufacturer's warranty.
5. Always unplug the H2O e3™ eActivator when cleaning or performing any other user maintenance.
6. Do not drink the S-Water™ after electrolysis is done.
7. Do not use hot water to make S-Water™, and do not heat or boil the finished S-Water™.
8. Always use the amount of water, salt and vinegar as per the instructions in this manual. Do not add more as this can cause leaking and/or create excessive fumes and cause breathing difficulties.
9. When making S-Water™, always use regular table salt and white vinegar.
10. Do not add any ingredients, before or after electrolysis, except for those stated in this Instruction Manual.
11. Electrolysis shall only be supplied to water, salt and vinegar as instructed in this Instruction Manual.
12. Keep this appliance and its cord out of the reach of children younger than 8 years old.
13. This appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge ONLY IF they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
14. Cleaning and user maintenance shall not be made by children unless they are older than 8 years old and supervised by a responsible adult.
15. Children shall not play with this appliance.

16. Do not use this appliance with a damaged cord or adapter. If it is not working as it should, or if it has been dropped, damaged, left outdoors, or immersed in water, return it to the distributor. If the supply cord is damaged, it must be replaced by the manufacturer or a qualified repair facility to avoid hazard.
17. If the supply cord on the adapter is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
18. Never force the plug into an outlet or pull or carry the unit by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
19. Do not use extension cords or outlets with inadequate current-carrying capacity, and in order to avoid circuit overload, do not operate another appliance on the same socket (circuit) as the H2O e3™ eActivator.
20. Do not operate the H2O e3™ Fruit & Veggie eSprayer if it, or any of its parts, have been damaged in any way.
21. To reduce the risk of electric shock, unplug the adapter from the outlet when not in use.
22. Never immerse the eActivator in water and take special care to make sure the Adapter Port doesn't come in contact with water.
23. Never use the H2O e3™ Fruit & Veggie eSprayer in frost or temperatures above 50°C/122°F or humid or wet locations.
24. To avoid leakage, check the following points after filling the H2O e3™ eActivator with water:
 - Check and make sure that the Silicone One-way Air Valve on the inside of the Water Tank Cap is sealed properly.
 - Make sure the eActivator Water Tank Cap is sealed properly and twisted on tight.
 - Never use the eSprayer Nozzle instead of the Water Tank Cap when the eActivator is tuned on.
 - Always keep the Silicone Cap for the Adapter Port closed when the Adapter is not plugged into the unit.
 - Check that the eActivator Base is fixed properly onto the eActivator Water Tank.
25. Do not use this appliance for anything other than its intended use.

SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY

USER INSTRUCTIONS

1. Fill the eActivator, shown in figure g) below, with 450ml of regular tap/drinking water.
 - ⚠ WARNING** Do not use hot or boiling water to make S-Water™, and do not heat or boil the finished S-Water™.
2. Add one spoon (provided with unit), which equals to 3g, of regular, table salt.
3. Twist the Water Tank Cap closed and shake eActivator until all the salt is dissolved. Then place the eActivator on a level surface.

⚠ CAUTION Never use the eSprayer Nozzle instead of the Water Tank Cap when the eActivator is tuned on.

NOTE: For optimal results, make sure to shake the water and salt solution until all the salt is dissolved. This will make the S-Water™ more concentrated with the cleaning, antibacterial and deodorizing oxidants.

⚠ WARNING Always keep the Silicone Cap for the Adapter Port, see Figure a), closed when the Adapter is not plugged into the unit.

4. Plug in the Adapter into the eActivator, and then press the ON/OFF button, see Figure b), above. The red indicator light will turn red and the electrolysis process will begin.
 - NOTE: The electrolysis process is preprogrammed to run for 6 minutes, and it will automatically stop after 6 minutes of electrolysis.
5. Once the electrolysis process is done and 6 minutes has passed, the indicator light will turn green, indicating the electrolysis process is complete and the S-Water™ is ready for use.
6. Liberally spray the S-Water™ onto fruit and vegetables or immerse them completely in S-Water™. **Rinse fruit and vegetables with regular drinking water before consuming.**
7. Optional: To create an even more effective antibacterial version of the S-Water™, after the electrolysis process is done, add one spoon of white vinegar (2.1ml) to the eActivator and shake to mix it in.

NOTE: The generated S-Water™ (with or without vinegar) will be effective for 1-2 weeks. After two weeks, its effectiveness will be lowered considerably.

⚠ WARNING Do not drink, heat, or mix the generated S-Water™ with any cleaning or sanitizing products and keep it out of reach of children.

8. Place eSprayer Nozzle in Figure c) onto the eActivator. Turn the eSprayer Nozzle Head in either direction, as shown in Figures d) and e) below, and choose between a more concentrated or wide spray mode.

